

SOFTWARE FUSION™

FUSION DISPLAY™

The FUSION™ display differs from the FUSION™ (pro) in that it does not require a PC or the FUSION™ PC software: a userfriendly interface consisting of a rotary knob and LCD display allows you to access, view and change configuration parameters for your driver/controller.

The standard parameters available on the FUSION™ display include network start address, network resolution, fixture length and show. For project-based LED driver orders, you can have the parameters of your choice uploaded to the FUSION™ display.

To change the LED driver configuration with the FUSION™ display, connect the FUSION™ display to the driver/controller with the UTP network cable. The FUSION™ display switches on automatically and displays the first main menu option. Turning



174

the knob lets you browse the main menu options, pressing the knob activates the selected menu. When you enter a menu, you can browse the possible values by turning the knob, and change the value by pressing the knob once you have arrived at the value of your choice.



FUSIONPRO™



FUSION™

BENEFITS

- Easy network setup
- 16-bit LedSync controller software
- Show sequence editing software
- (FUSION™/FUSIONPRO™)